



Modular Carpet Installation Instructions - TractionBack® Plus with Barrier Coating for Chemically Abated Concrete Floors

The following document describes the correct method for installing Milliken Cushionback modular carpet manufactured with TractionBack® adhesion backing plus Milliken connectors and Milliken Barrier Coating. No additional pressure sensitive adhesive is required.

APPLICABLE CRI INSTALLATION METHODS: Except where exceeded or modified by this instruction, Milliken recognizes the CRI Carpet Installation Standard 104 as the minimum acceptable standard for the installation of its carpet products.

NOTE: The installation contractor is responsible for reasonable inspection of the product prior to installation and for maintenance of dye lot integrity during installation. Milliken will not be responsible for visible defects after carpet has been installed.

GENERAL: Milliken modular carpet with TractionBack® is designed for installation without the use of adhesive. However, the TractionBack® adhesion backing system will ONLY function properly when the stringent floor preparation and installation guidelines outlined below are followed. For this reason, it is VERY important that a qualified installation contractor install this product. Milliken **strongly recommends** the use of a **Milliken Certified Installation Contractor** to install TractionBack® modular carpets. As an alternate source, Floor Covering Installation Board (**FCIB**) certified contractors as well as companies that can document that they employ installers certified at the C-2 level or higher by the International Certified Floorcovering Installers Association (**CFI**) are also recognized as viable sources of quality installation.

TILE ORIENTATION: Some Milliken designs require specific installation methods (Quarter-turn, Ashlar, etc.) to achieve the intended appearance. **PRIOR TO INSTALLATION, always consult your local Milliken sales representative or Milliken Technical Services (1-800-528-8453 Option 3) if you have questions or concerns about the correct installation method.** Due to the nature and construction of solution-dyed nylon, we are able to provide very unique, tufted design patterns. From time to time during installation, these products may require that tiles be shifted within the layout in order to avoid a dark line in one tile being positioned next to a dark line in another tile. The dark seam is not a carpet manufacturing defect and can be avoided by attention during the installation phase.

FLOOR PREPARATION:

NOTE: The following are guidelines only. Financial responsibility for bringing any floor into conformance with these guidelines must be determined prior to beginning work.

- Floor preparation in accordance with ASTM F710-11 unless specifically allowed per this document.
- **Chemical abatement:** Removal of Asbestos Adhesives / "Cutback"/ Residual Adhesives; if your subfloor is contaminated with old adhesives and you choose a chemical abatement method to remove them, NEVER scrape, sand or mechanically abrade any exposed black adhesive or any existing resilient floor. These may contain asbestos. The floor should be chemically abated in accordance with all Federal, State, and Local regulations. Clean well and dry as specified in the manufacturers' abatement procedures. No oily residue should remain on the concrete.
- **Subfloor:** Subfloor must be structurally sound, clean, dust free, smooth and level. Inspect the floor for oily spots remaining from the abatement process. If necessary, clean/mop with water and mild detergent to remove. Allow the floor to dry. Cracks and holes in excess of 1/8" (3.2mm) should be filled with a Portland Cement based floor patching material. Gypsum based compounds are not recommended.
- **Level Floor:** Protruding objects must be removed. Floor must be flat (not undulating) to within 1/4" in 12' (6.4mm across 3.66m) with no abrupt changes. This is very critical with TractionBack® Plus since there can be no differential adjustment of corner alignment as is possible when a general coverage of adhesive is present.
- **Dust Removal:** Prior to sealing the floor, it is REQUIRED that ALL dust and dirt MUST be removed.

SEALING THE FLOOR WITH MILLIKEN BARRIER COATING:

- **Floor Preparation for Sealing:** The floor should be prepared by applying painters tape to any walls or flooring abutments that will not be later covered with trim to prevent the Milliken Barrier Coating from coating/coloring those surfaces.
- **Sealing of Floor:** Mix the Milliken Barrier Coating with a mixing shaft and drill until well mixed. The coating is water-based and cleans up in soap and water. Using a large paint brush (3-6" is suggested), cut in around the edge of the floor at the wall/floor edge. Next, pour the Barrier coating into a paint roller pan. Using a 3/8" nap paint roller, roll the Barrier coating over the floor. Use the pan to wet the roller. Do not pour the coating on the floor and roll out as an uneven coverage results. Use a W pattern with the roller to get uniform coating. Coat the entire floor and allow to fully dry before proceeding. It will be a creamy pink appearance while wet but dries to a solid red color in about 1 hour.
- Once dry, repeat the roller coating procedure to give the floor **TWO** coats.
- A bucket (4.5 gallons) of Milliken Barrier Coating should cover approximately 200 sq. yds.

INSTALLATION INSTRUCTIONS:

- **Additional Dust Removal:** For TractionBack® to effectively prevent lateral movement, it is REQUIRED that ALL dust and dirt MUST be removed from the floor prior to installation. This will typically be addressed as part of the abatement and sealing processes. If not, insure the floor is dust free before proceeding with the Tractionback and Milliken connectors installation.
- **Carpet Storage and Conditioning:** Carpet should be stored between 40°F and 100°F (4°C to 38°C) and must be conditioned to between 60°F and 90°F (15°C and 32°C) for at least 24 hours prior to and during installation.
- Floor temperature should be 60°F (15°C) minimum for proper performance of TractionBack®. Floor temperature should not exceed 90°F.

- Milliken TractionBack® Plus is recommended for the installation of all Milliken modular products with Comfort Plus & Underscore backing systems that have the addition of TractionBack® when:
 - Renovation-On Grade
 - There is no visible moisture on the surface.
 - Concrete must be dust free with floor preparation as per guidelines on page 1 of these instructions.
 - Acclimatized to service conditions
 - Bond test is required with archived photo documentation


GENERAL: The most important part of any modular installation occurs before the first tile goes on the floor or any adhesive is applied. **Proper planning and layout is crucial to the success of all modular installation.** Floor preparation should be verified before beginning installation. Milliken Technical Services should be contacted for assistance if problems are encountered.

Bond Test:

1. Place a carpet tile on the cleaned floor and press the entire tile down firmly. Kneel beside the module and attempt to slide it across the floor by grasping the opposite edge and pulling. The tile should not move laterally. TractionBack® should not transfer to the floor. The bond test is performed without the addition of the Milliken connector as the TractionBack® should grip the substrate.
2. Lift a corner of the tile and then lift the tile from the floor. The tile should easily separate from the floor surface.

CHALKLINE APPLICATION: Once floor preparation is completed and the floor thoroughly mopped, two working chalklines must be applied to the floor to insure a straight, square, and properly aligned installation. These chalklines intersect at the starting point and are exactly 90° to each other. Following are two methods for applying chalklines:

METHOD #1 - TRIANGLE METHOD:

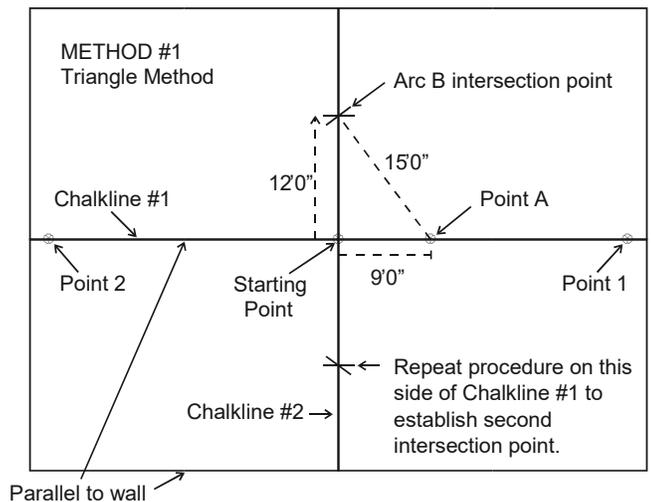

Chalkline #1: Regardless of method, chalkline one – also referred to as the “baseline” - is snapped roughly parallel to some architectural feature (outside wall, column line, etc.) and generally runs the longer dimension of the area. This is done by placing two and only two points on the floor as far apart as possible within the area at the same distance from the selected architectural feature. (See Point 1 and Point 2 on the diagram.) This distance is determined by the installer to optimize cut sizes and minimize waste.


Starting point and Chalkline #2: Select a starting point somewhere on Chalkline #1. Location of starting point is usually but not always close to the true center of the area. It may be offset to optimize cut sizes. Using the largest possible multiple of a 3-4-5 triangle (6-8-10,9-12-15,12-16-20, 15-20-25, 18-24-30, 30-40-50 etc.), construct a chalkline through the starting point exactly 90° to chalkline #1 as follows:

Note: In this example we will use a 9-12-15 triangle measured in feet and inches, however, units of measure used do not affect the validity of the procedure.

Construct Chalkline #2 as follows:

1. Measure exactly 9’0” from the starting point along chalkline #1.
2. Measure exactly 12’0” from the starting point approximately perpendicular to the line #1. Mark an arc (line) on the floor parallel to chalkline #1 four to five inches long as indicated by Arc “B”.
3. Measure exactly 15’0” diagonally from point “A” to Arc “B” as indicated.
4. That point on Arc “B” exactly 15’0” from point “A” when connected with the starting point gives a line exactly 90° to chalkline #1. For maximum accuracy, this procedure should be repeated on the opposite side of chalkline #1. A chalkline or a dry line should be stretched between the two intersection points created. If measurements are accurate, the string will go directly across the starting point.

METHOD #2 - DOUBLE ARC METHOD:

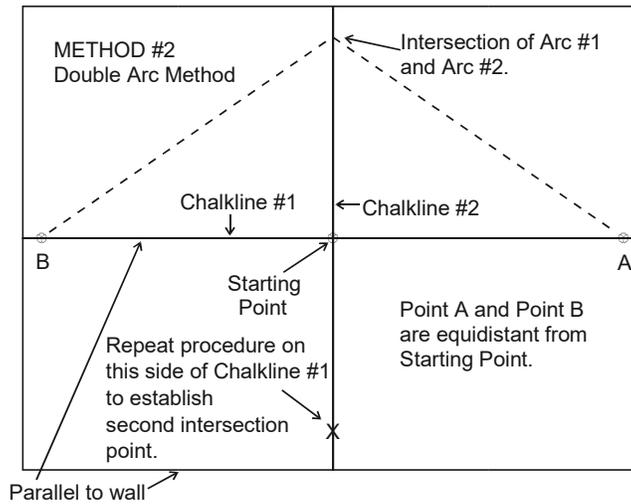

Chalkline #1 - Same as in Triangle Method.


Chalkline #2 - Select starting point same as triangle method and proceed as follows:

1. From the starting point, measure any convenient distance in both directions along chalkline #1 and mark point A & B on the floor (see diagram). These points should be as close as possible to the end walls of the area and must be the same distance from the starting point.
2. From points A & B, measure diagonally as indicated by the dotted lines allowing the tape measure to feed out until you are close to the side wall. Place a framing square or a carpet module at the starting point aligned with chalkline #1 to act as a visual guide to tell you when you are close to 90 degrees. Once you feel you are close, pick a distance and remember it.
3. Strike an arc (Arc #1) measuring the distance determined above from point "A". Now working from point "B", measure diagonally using exactly the same distance used to strike Arc #1 and strike Arc #2. This intersection point connected to the starting point is a 90° angle to line #1.
4. As in the Triangle Method, this procedure should be repeated on the opposite side of line #1. Once accurate chalklines are applied, begin installation at the intersection point of the two chalklines.

When working with TractionBack®, it is necessary to move across the newly placed modules very carefully until the installation can be locked in with a connector placed at the corner of each tile including the perimeter against walls and/or abutments. (See included graphics for connector placement).

GENERAL:

- The pyramid technique (see diagram below) gives three alignment checkpoints on each tile placed and should be used on ALL products regardless of module size or backing. This technique also helps control spacing or "growth" and keeps the entire layout closely referenced to the chalklines. Strict attention should be paid to corner alignment. Tiles out of alignment by more than 1/16" (1.6mm) on 50cm product or 1/8" (3.2 mm.) on 36" or 1m product should not be installed. Some "wandering" of edges due to undulation in the floor is unavoidable. This will be gradual and tend to come and go randomly, however, if corners become misaligned and this misalignment continues to increase, this indicates an out of square condition. The problem should be immediately determined and corrected.

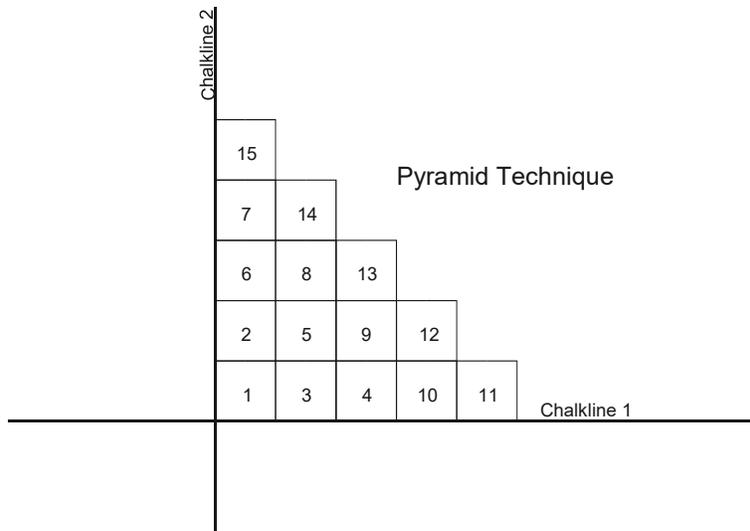


- Always **SLIDE** each module into position from the side to prevent trapped yarn. Care should be taken to not wrinkle the connector when placing the tile. Set each module by firmly rubbing both joints. Should the TractionBack® become contaminated with dust, the back of the tile should be wiped with a damp cloth to remove the contamination and restore the effectiveness of the TractionBack®.

- Modules should be tight but not compressed. Peaking will occur when modules are too tight. Too loose an installation will never achieve the best possible overall appearance and can show gaps over time as the looseness accumulates in one area.
- Tightness or “growth” should be determined by measuring the distance covered by 11 full modules (10 joints). This measurement should be no more than 1/8” (3.2mm) over the calculated distance for eleven tiles. In some cases, this distance may be less than calculated. This distance may also vary between the length and width of the product. Once this “growth” figure is determined, it must be maintained throughout the installation.
- Directional arrows are applied to the back of each tile indicating pile direction. This allows the customer/installation contractor to choose the method of installation preferred: Quarter-Turned, Monolithic (Corner-to-Corner or Ashlar), Random, 180-Degree Turned, Checkerboard, Mosaic or a mixture. **Some Milliken designs REQUIRE that specific installation methods be used to achieve the desired visual. Always check with your Milliken representative or call Technical Services if there is any question.**
- Whenever possible it is recommended that arrows be run parallel to major traffic lanes. Unless it is unavoidable, arrows should not run across hallways.
- For heavy rolling traffic areas please contact Milliken Technical Services to discuss the potential need for additional locking mechanisms.
- When installing Tractionback Plus on an incline, Milliken recommends the use of the applicable Milliken Non-Reactive Standard or Milliken Moisture Extreme adhesives to prevent slippage on the incline.


CONNECTOR PLACEMENT:

- A connector is centered under each corner no matter the tile size nor the installation layout method.
- The non-tacky side of the connector goes against the floor.


1 Meter Tiles
Monolithic / Quarter-Turn /
Multidirectional

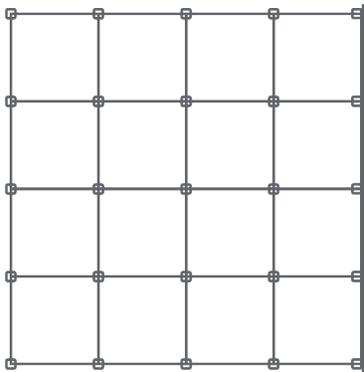


1 Meter Tiles
Horizontal (Brick) Ashlar /
Vertical Ashlar

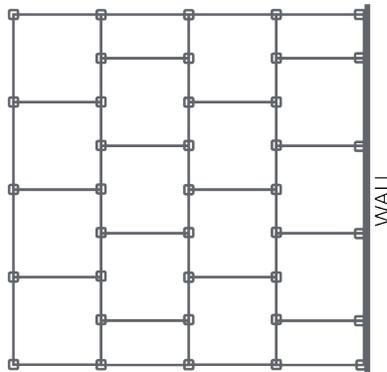


50cm Tiles
Monolithic / Quarter-Turn /
Multidirectional

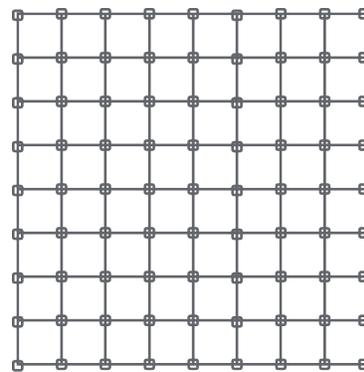


50cm Tiles
Horizontal (Brick) Ashlar /
Vertical Ashlar

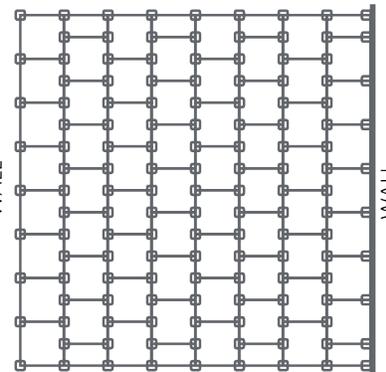


50cm x 1m Planks
Monolithic / Multidirectional

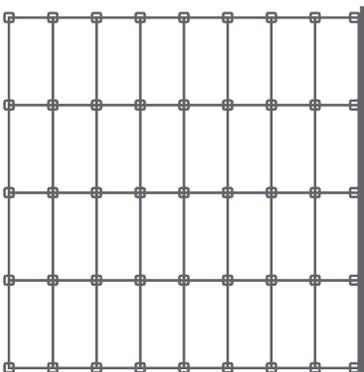


50cm x 1m Planks
Horizontal (Brick) Ashlar /
Vertical Ashlar

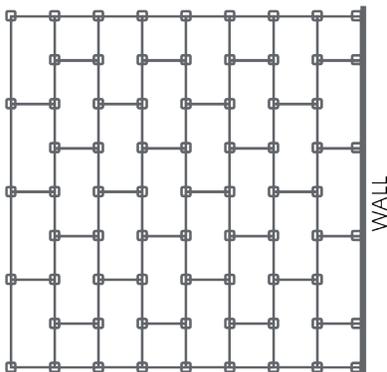


50cm x 1m Planks
Basketweave

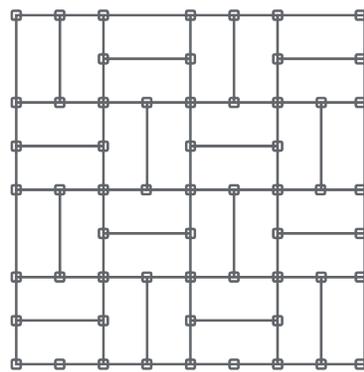


50cm x 1m Planks
Herringbone

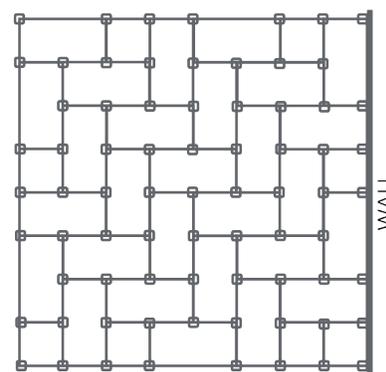


25cm x 1m Planks
Monolithic / Multidirectional

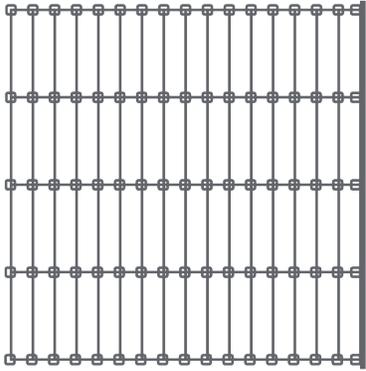


25cm x 1m Planks
Horizontal (Brick) Ashlar /
Vertical Ashlar

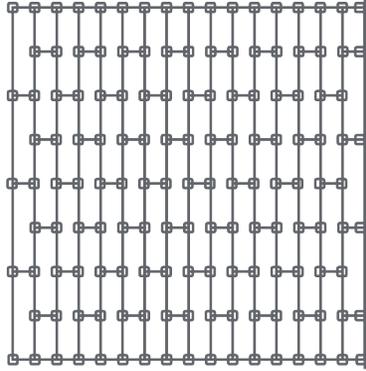

25cm x 1m Planks
Basketweave

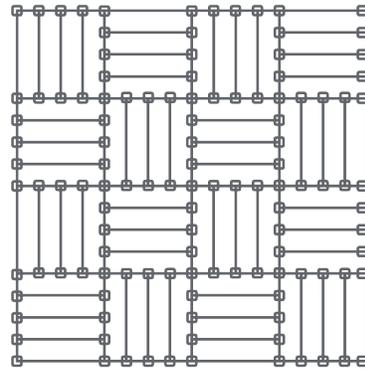

25cm x 1m Planks
Herringbone

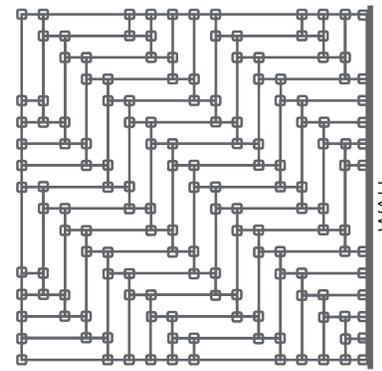


CONNECTOR APPLICATION RATE:

The chart below shows the coverage rate (by square yard) based on 1 box of 500 connectors.

TILE SIZE	INSTALLATION METHOD		
	Monolithic/ Quarter-Turn / Multidirectional	Horizontal (Brick) Ashlar / Vertical Ashlar	Herringbone
50cm square	130 square yards	65 square yards	n/a
1m square	525 square yards	275 square yards	n/a
25cm x 1m plank	130 square yards	65 square yards	65 square yards
50cm x 1m plank	270 square yards	135 square yards	135 square yards

CUTTING:

- The parallel or "scribe" cutting technique is one method of easily and accurately cutting modular carpet. (See diagram below.) This method is valid regardless of backing system and yields a good vertical cut that is snug but not compressed. Any method that achieves this result is acceptable.

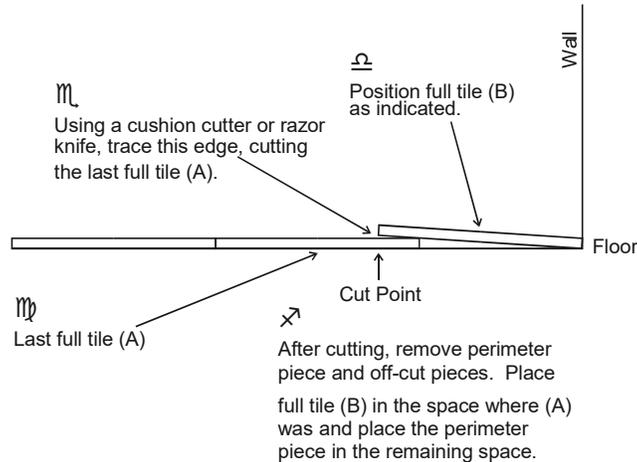

- Properly installed installations with TractionBack® Plus can begin receiving foot and rolling traffic as soon as they are finished with a connector placed at each corner. Exposed edges should be protected when rolling heavy loads such as pallets of carpet across the installed portion. Plywood or Masonite should be positioned on the carpet when heavy furniture or supplies are moved.
 - The recommended casters for desk chairs should have a tread width of 3/4" to 1" (19mm to 25mm), and a wheel diameter of 2" - 2 1/2" (5cm - 6cm) tapered. Hard polyolefin composition is recommended. For more detailed information, contact Milliken Technical Services.

TRANSITIONS AND STAIRS:

- For the most attractive finish with its modular products Milliken recommends the use of top set cove base after carpet installation is completed.
- Appropriate transition strips MUST be installed wherever there is a potential for an edge to be exposed or where Milliken modular carpet finishes to another flooring type. The total thickness of Comfort Plus®- and Underscore™-backed products requires a transition treatment capable of accepting the carpet without the necessity of modifying or adapting the edge. Johnsonite's EG-XX-W edge guard and CRS-XX-D reducer have proven successful for edge protection for Comfort Plus- and Underscore-backed products. Equivalent products from other manufacturers are also acceptable.
- For best long-term performance on stairs, a double undercut nosing such as Johnsonite part SVCD-XX-A or equal should be applied to each step modules with cut to fit on both the tread and the riser. This method of installation on stairs protects the carpet from receiving the impact present at the nose and helps in holding the riser carpet in place. Generally, a Cove Base type adhesive is also used to adhere the riser and tread piece to ensure that the carpet stays in place.
- It is possible to install both Underscore™- and Comfort Plus®-backed modules on stairs without the use of a separate nosing. This requires modifying and/or removing the backing and results in placing a structurally compromised product directly on the nose of the stair with no protection from the severe impact and abrasion that will occur. **This is not recommended.**
- Johnsonite transition treatments, stair nosing's and similar products from other manufacturers are sold through distributors. For the location of the nearest Johnsonite distributor, call 800-899-8916. When obtaining transition/nosing treatments from other manufacturers, always be sure to specify the total thickness of the carpet product being installed to insure the correct transition product is used. **USE OF IMPROPER AND/OR INADEQUATELY INSTALLED TRANSITION TREATMENTS WILL RESULT IN EDGE FAILURE. SELECTION AND INSTALLATION OF THESE PRODUCTS IS THE RESPONSIBILITY OF THE INSTALLATION CONTRACTOR.**

PROTECTING CARPET AFTER INSTALLATION:

Milliken recognizes the CRI Carpet Installation Standard 2011 as the standard guideline for protecting carpet and associated materials after installation. The CRI Standard specifically states: "It is recommended that carpet be the last trade on any job site. However, if it is required to protect the finished floor covering from soil or paint, or if any additional work is required to be done after installation, the carpet should be covered with a non-staining building material paper. Protect the installation from rolling traffic by using sheets of hardboard or plywood in potentially affected areas." Also, CRI cautions: "Self-adhering plastic films may leave residues that result in rapid soiling after removal. Do not place plastic sheeting over any carpet installation because it may present a slip hazard. Most importantly, plastic coverings will trap moisture, retard adhesive curing and may promote mold growth."

NOTE: THE ABOVE INSTALLATION INSTRUCTIONS ARE GENERAL IN NATURE AND ARE NOT COMPLETE FOR EVERY MILLIKEN MODULAR CARPET PATTERN. SOME MILLIKEN PATTERNS REQUIRE SPECIFIC INSTALLATION METHODS (QUARTER-TURNED, ASHLAR, ETC.) TO ACHIEVE THE DESIRED APPEARANCE. ALWAYS CONSULT YOUR MILLIKEN REPRESENTATIVE OR TECHNICAL SERVICES IF THERE ARE QUESTIONS ABOUT THE CORRECT INSTALLATION METHOD.

This information is supplied by Milliken & Company
300 Lukken Industrial Drive West, LaGrange, Georgia 30240
Call Technical Services Team Toll Free 1-800-528-8453 – Select Option #2

The above instructions represent the best available data and are deemed to be correct and complete; however, Milliken assumes no liability for installation-related problems. 2/18/2019